

Ściana dekoracyjna

Motivo

Installation and use instructions

Installation and use instructions

1. General information:

1.1. The Motivo decorative wall should be stored indoors, on a dry, flat stable surface, guaranteeing no direct contact with the ground, in a horizontal or vertical position, ensuring stable support of the panels over their entire surface (without the possibility of their bending) at a temperature not exceeding 60°C, without exposure to direct sunlight.

1.2. The Motivo decorative wall should be transported horizontally, at a temperature not exceeding 60°C.

1.3. Prior to installation, the Motivo decorative wall should be seasoned in the room where it will be installed for a minimum of 24 hours in order to equilibrate its temperature with the environment.

1.4. Unpack the product and compare colours before installation.

1.5. It is recommended to finish the Motivo decorative wall with dedicated finishing strips.

1.6. Do not use Motivo decorative wall in areas exposed to sustained temperatures above 40°C, e.g. in a sauna, on a chimney, next to a cooker, in rooms exposed to temperature fluctuations above 10°C; areas in strong sunlight.

1.7. The product can be installed in damp areas (kitchen, bathroom) provided it is sealed with silicone. The product can be mounted on the ceiling.

1.8. Do not modify the product by treating its surface or covering it with another material.

1.9. If there are any visible defects in the product or if you notice any abnormalities, please report these immediately to the dealer before installation.

1.10. All rules indicated in the installation and use instructions must be followed. Failure to the instructions will result in the loss of the product warranty.

1.11. Product for indoor installation only.

1.12. The product is 100% recyclable.

2. Assembly

2.1. The Motivo decorative wall should be mounted on a frame or with glue, in the case of ceiling mounting with glue and staples.

2.2. The Motivo decorative wall should be installed vertically and on the ceiling.

2.3. Installation should be carried out by persons with basic technical knowledge and knowledge of safety rules.

2.4. The Motivo decorative wall should be laid from left to right, according to the numbering on the back of each panel.

2.5. After applying the first panel, check the plumb line and fix it, then clip in the next panel.

2.6. Before installing the panels on the wall, the floor must be level.

2.7. Use wedges to align the pattern on the Motivo decorative wall.

Frame design

2.8. The frame should be made of wooden battens, fixed directly to the wall.

2.9. All battens should be level using a spirit level so that they form an even plane, use shims or wedges to level the battens if necessary.

2.10. The battens should be made perpendicular to the direction in which the panels are laid - if the panels will be laid vertically, the battens must be laid horizontally.

2.11. Distance between patches - 40 cm.

2.12. Patch requirements:

- made of good quality wood, free of knots
- fixed to the wall firmly and securely with screws or other fasteners suitable for the type of substrate
- the battens should be left to rest for at least 24 hours in the room in which they are to be installed (to allow the temperature and humidity to equalize).

Frame mounting

2.13. Fix the panels to the batten, through the tongue on the long side.

2.14. The staple should adhere so that it does not damage the next panel.

Mounting with glue

2.15. The substrate must be prepared properly - it must be smooth, non-sandy and dry.

2.16. It is recommended to use a highly flexible adhesive based on hybrid polymers, suitable for interior use and bonding of all building and construction materials - also wet: concrete, brick, gypsum board, natural stone, wood and wood-based materials, metals, glass and ceramics, most plastics, e.g. PVC, polystyrene, polyacrylates and polycarbonates, e.g. VOX assembly adhesive.

2.17. Use the adhesive according to its instructions, in a well-ventilated room.

2.18. Apply the adhesive to the panel in an 'S' shape.

2.19. The first panel on a given wall needs to be covered with glue over the entire surface, leaving out the lock zones.

Mounting on the ceiling

2.20. If the panels are mounted on the ceiling, it is recommended to install the
-directly to OSB- with glue and with staples. Glue should be applied over the entire surface of the panel, omitting the lock zones.

2.21. When fitting panels to the ceiling, do not push the trim all the way in - leave a 3 mm gap.

2.10. Before mounting on the ceiling, the level of the OSB boards and the joints between them should be checked with a spirit level.

2.22. Installation on the ceiling should start with the installation of the trims: B4 , B2 (recommended) and B6. Fit the trims with glue and with staples. To join the mouldings together, cut them at 45° or 90°.

2.23. The feather of the first and last panel should be trimmed (see Fig. Trimming start-to-finish panels), as close to the chamber wall as possible.

2.24. For joining the panels on the shorter side, use the B3 connector strip - install with glue and staples.

Cutting of panels

2.25. Conventional carpentry tools for cutting or drilling, such as a hand saw, jigsaw, table saw, should be used to work the Motivo decorative wall. Fine-toothed saws should be used; mechanical processing tools should be used at the same or higher speeds as for woodworking.

2.26. When finishing the panels with B1-B5 trims, the tongue must be cut off.

NOTES:

- When installing with glue, leave the panels to dry in a well-ventilated room
- In rooms that require the panels to be sealed with silicone, follow the manufacturer's recommendations and allow the panels to dry.

3. Information on use

3.1. The panel should not be subjected to any additional load or load-bearing function in the structure.

3.2. Hangers, shelves and other objects should not be screwed directly to the panel.

3.3. It is possible to fix on the substrate under the panel, with suitable screws or dowels designed for the type of substrate. To do this, a suitable hole must be drilled in the panel to ensure this is possible.

4. Cleaning and maintenance

4.1. Liquid stains should not be left to dry.


4.2. The Motivo decorative wall should be cleaned with water and a light detergent and cloth; do not leave detergent on the surface, rinse thoroughly after cleaning.

4.3. Motivo decorative wall should not be cleaned with sharp and rough cloths, sponges and brushes.

4.4. Intense scrubbing and the use of strong cleaning agents or leaving detergents on without rinsing can damage the panel surface or discolour the material.

4.5. Do not use solvents, acids and alkalis or agents based on these ingredients for cleaning

Tools

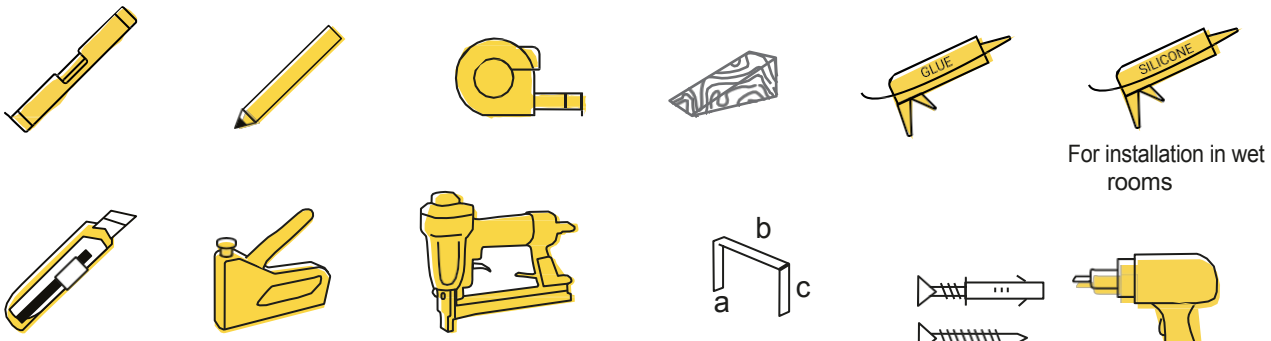

For installation in wet rooms


manual taker

0.3 MPa
pneumatic taker

a: 0.7-0.8 mm
b: min 11 mm
c: min 12 mm


Frame tools

Mounting with glue

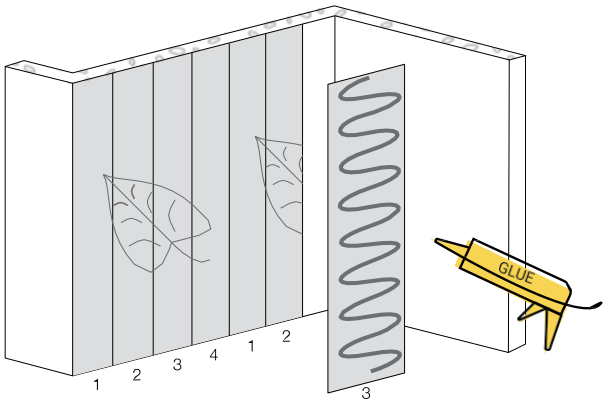


Frame mounting


1

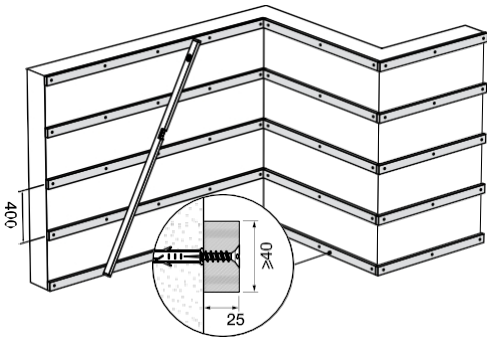


2

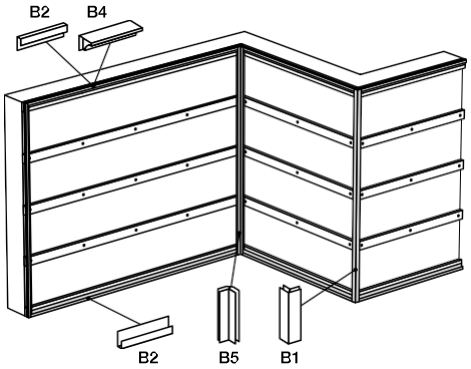

3

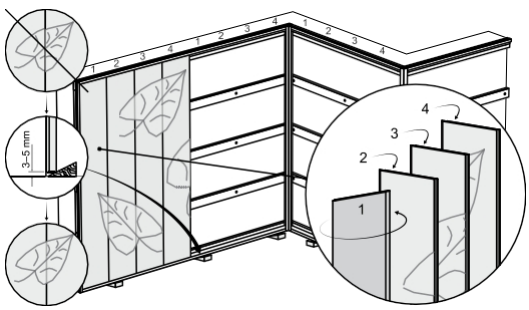


4

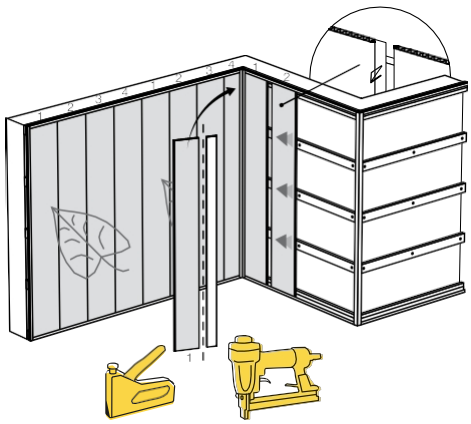


V. 07.2019

Universal trim

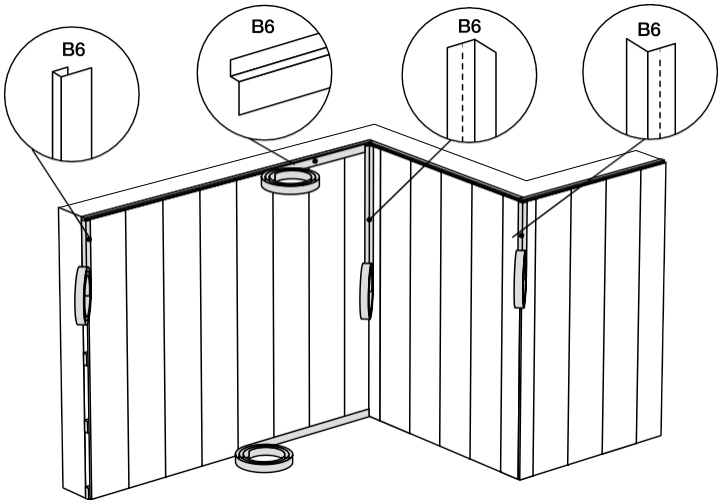


Ceiling mounting


1

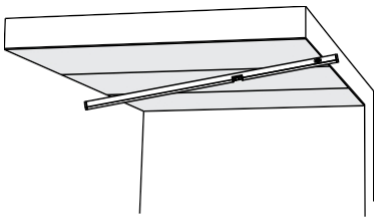


2

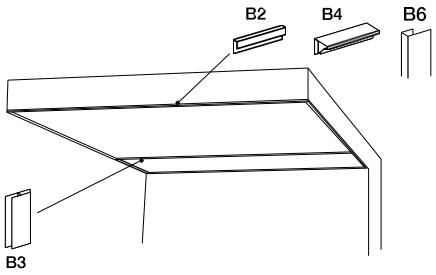


3

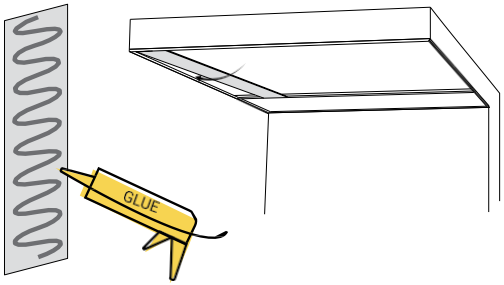

4

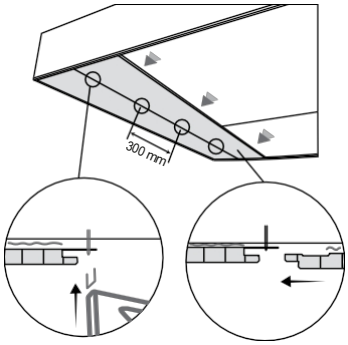

Installation of skirting boards

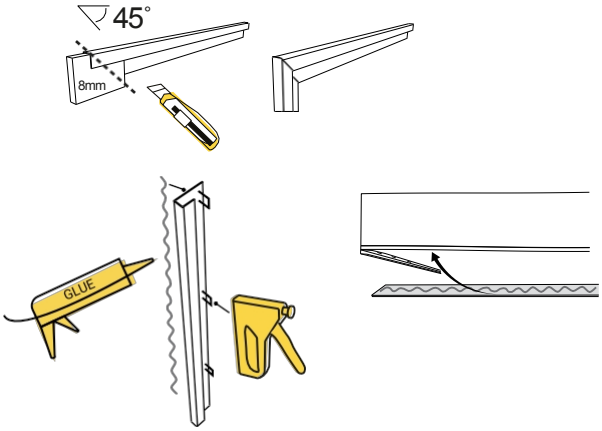

Trimming stak-end panels

